

IN THE HOME

- Connect the DVR dock AV out to an available AV source on your TV (FIG 6) or home theater receiver.
- Insert the DVR into the DVR dock with the logo facing out (FIG 5).
- Press the **POWER**  button on the DVR dock (FIG 5) or on the remote (FIG 7).
- Power on the TV and select the proper source input from the TV that connects to the docking station.
- Use the DVR dock or remote navigation arrows to choose a selection. Press enter. 
- Use the UP/DN  navigation arrows to select the file then press **PLAY** . Press **STOP**  to return to the previous menu or press **MENU** to return to the main menu.
- To remove the DVR from the dock, turn the power off, then press the **RELEASE** button located on the back of the dock (FIG 6). Pull the DVR directly up to release.

DVR AND HOME DOCKING STATION



FIG 5



FIG 6

RECORDING

Recording to the DVR is permitted only for media which you personally own. Please see the Owner's Manual for further details on how to record media to the DVR using one of three options:

- Manually record programs from the TV or home theater system.
- Record a movie directly from the T10/T12 vehicle entertainment system
- Copy media files from a home PC

NOTE: Copying media must be for your personal use only and cannot be distributed or used for commercial purposes.

RVR2000 REMOTE


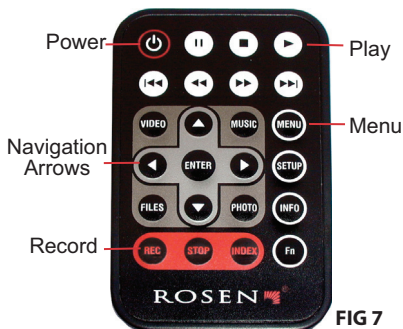


FIG 7


IN THE VEHICLE

- Turn vehicle ignition to **ON** or **ACC**.
- Press **OPEN**  on the T10/T12 remote (FIG 2) or **ENT**  on the T10/T12 front control panel (FIG 1).

**T10/T12
FRONT CONTROL PANEL**

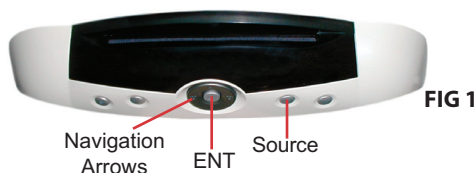

T10/T12 REMOTE

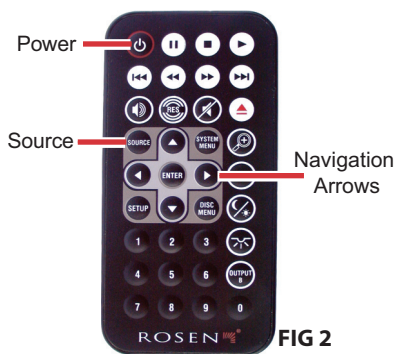

PLAY A MOVIE OR MP3


- Pull the DVR door lever to the left to release the door (FIG 4).
- Make sure the Rosen logo is facing downward and the connection jack is facing towards the T10/T12. Slide the DVR (FIG 3) into the door slot using the alignment guides (FIG 4). Carefully close the DVR door.

NOTE: If the DVR is not inserted properly, the door will not close

- Press and release the **SOURCE** button on the remote (FIG 2) or the front control panel (FIG 1) until "DVR" is displayed.
- Use the navigation arrows on the remote or on the control panel to select the **VIDEO** or **AUDIO** icon and press enter.
- Use the UP/DN  navigation arrows to select a video or audio file for playback. Press **PLAY**.

NOTE: Video files can be previewed in the lower left corner of the screen before pressing **PLAY**.

DVR CASSETTE

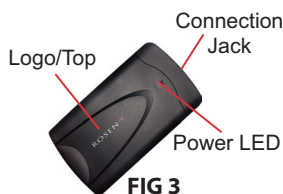

T10/T12 SYSTEM

